



MINI CLASSIC CT™ Water Distiller



Owner's Manual

Pure & Secure, LLC.
4511 NW 42nd, Lincoln, NE 68524 USA
402-467-9300
info@mypurewater.com
www.MyPureWater.com

CONTENTS

A letter from the President of Pure & Secure, LLC	3
Important Safety Information	4
Electrical Requirements	4
Use and Care of your Distiller.....	4
The Distillation Process	5
Getting Acquainted With Your Mini-Classic CT	6-7
Unpacking Your Mini-Classic CT	8
First Time Start-Up	8-9
Normal Operation	9
Maintenance & Cleaning.....	10-11
• Maintenance	
• Cleaning	
• Replacing the Carbon Filter	
Troubleshooting	12-13
Individual Parts List.....	14
Exploded View of Mini-Classic CT	15
For the Record.....	back cover
Ordering Parts and Servicing.....	back cover

CONGRATULATIONS!

You've taken an important step to ensure that you and your family have fresh, great tasting high-purity drinking water.

The Pure Water Mini Classic CT™ distiller is built of the finest materials and constructed with care and attention to detail. If you need assistance, please contact your local Pure Water Distributor, or contact Pure Water Customer Service at 1-402-467-9300 or Support@mypurewater.com. We urge you to take the time to read and understand the Safety Information section that follows.

We are sure you will have many years of use from your Pure Water Mini-Classic CT distiller. If you're as thrilled with this product as we expect you will be, we encourage you to tell a friend or neighbor!

Thanks for being a member of the Pure Water Family and helping us to "Improve the Quality of Life Through the Quality of Water!"™

Sincerely,

Courtney Lawyer

President

IMPORTANT SAFETY INFORMATION

- Operate indoors only and allow at least 3 inches of clearance around unit when in operation.
- Do NOT use with an extension cord.
- Always unplug the power before assembling, repairing or doing any work on the distiller.
- Make sure the lid is removed from the glass jug before inserting into holding area, and before unit is turned on.
- NEVER immerse the distiller in water or any other liquid.
- NEVER operate the distiller with a damaged cord or allow the cord to become exposed to hot surfaces.
- NEVER let children play with the distiller.
- Make sure your electrical outlet is properly grounded. If in doubt, contact a qualified electrician.
- NEVER remove the boiling chamber from the unit until it has cooled down. (*Approximately 30 minutes after a cycle is complete*)
- The physiological effect of the operation of this appliance, beneficial or otherwise has not been investigated by UL.

ELECTRICAL REQUIREMENTS

The Pure Water Mini Classic CT must be plugged directly into a fully grounded outlet. The 120V version is 60 Hz and will use approximately 7 amps when operating, so isolate a 10 amp fuse or circuit breaker for the unit. The 220V & 240V versions will use approximately 3.5 amps when operating, so isolate a 10 amp fuse or circuit breaker for the unit. These units operate between 50-60 Hz or as otherwise specified on the back of your distiller.


USE AND CARE OF YOUR DISTILLER

To ensure proper performance and a lifetime of trouble-free service, please refer to maintenance & cleaning on pg 10-11 for more information. Lack of maintenance may void your warranty.

THE DISTILLATION PROCESS... IT MIRRORS NATURE

Nature has a way to produce pure water from contaminated sea water. First, the sun heats the surface of the ocean. Then, the heat causes H_2O molecules, or pure water, to evaporate (1) from the surface of the ocean and rise to condense (2) in the form of clouds. When the conditions are right, the clouds cannot hold any moisture and water precipitates (3) and falls to earth as rain.

NATURE'S HYDROLOGIC CYCLE...

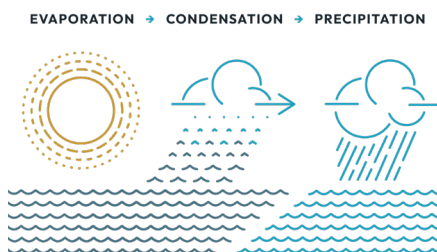


THE PURE WATER WAY...


A distiller operates the same way. Water is placed into a boiling chamber where heat is applied. The water boils and H_2O molecules (steam) evaporate (1). The steam enters the condenser where cool air causes the steam to condense, (2) it then precipitates (3) as droplets of pure water. This water drips through a carbon filter and is collected in a glass jar.




GETTING ACQUAINTED WITH YOUR DISTILLER

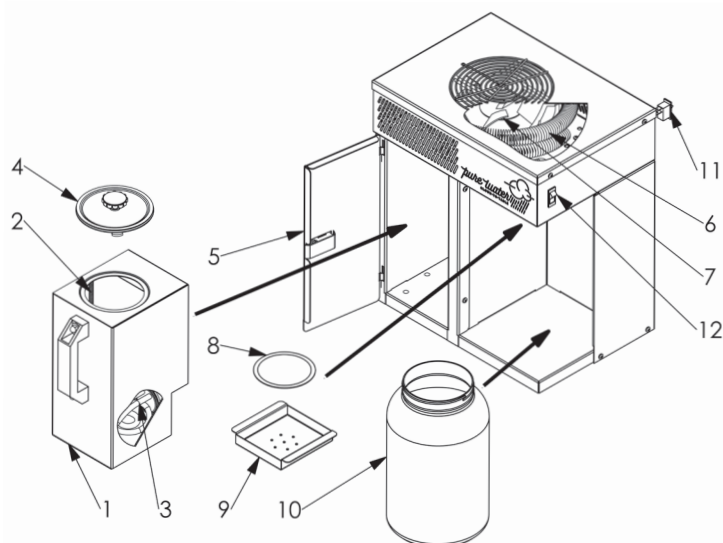

COMPONENT IDENTIFICATION

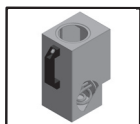


Boiling Chamber (1). The manually-filled stainless steel boiling chamber holds approximately one gallon of water when filled to the proper level.

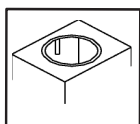


Water Level Indicator (2). A small rod which extends down into the boiling chamber. The boiling chamber should be filled to touch the bottom of this indicator. **CAUTION: DO NOT OVERFILL.**



Heating Element (3). The 800-watt heating element provides the heat to boil the water in the boiling chamber.

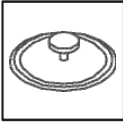


Lid (4). The lid is constructed of heavy-gauge stainless steel and has a special gasket and handle that tighten to seal when turned.

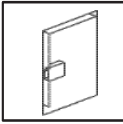


Door (5). The stainless-steel door improves the look of the unit and serves an important safety function. DO NOT open the door until the unit has stopped distilling for a minimum of 30 minutes.




Condenser (6). A hollow-finned stainless-steel tube where the steam from the boiling chamber is collected and cooled by the air from the fan. The steam is converted into high-purity drinking water. At the top portion of the condensing coil, there are two small holes. These are two gas vents to allow volatile compounds to escape.

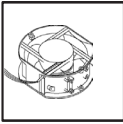

Fan (7). An electrical fan that works automatically to provide a flow of air across the outside of the condenser.

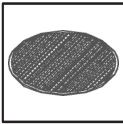


Filter (8). Before the distilled water flows into the drinking water container, it passes through an activated carbon filter pack to polish the taste of the water.

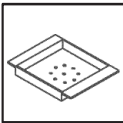


Filter Bracket (9). A stainless-steel housing designed to slide into the guides in the distiller and hold the carbon filter pack.



Drinking Water Container (10). This glass container collects the distilled water. It's equipped with a pour-through lid for ease of use.

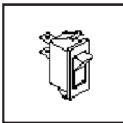

Main Power Switch (11). Turns the unit on or off.

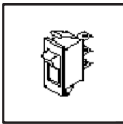

Cycle Start Switch (12). Pressing this switch will start the 210-minute distillation cycle.

UNPACKING YOUR MINI CLASSIC CT

Your Pure Water Mini Classic CT water purification system is shipped to you in a durable carton. Carefully remove the contents from the box.

The Pure Water Mini-Classic CT carton contains:

- The Pure Water Mini-Classic CT distiller.
- Glass container and lid.
- Filter and bracket.
- Owners Manual and Warranty Card.
- Power Cord (Not included in 220 & 240 Volt machines).

Contact our customer service department if anything is missing. Call us at 402-467-9300 or email us at Support@MyPureWater.com.

Note: Save the box and packing materials for future use in the unlikely event your Mini Classic CT should require service work.

FIRST TIME START-UP

Starting the unit for the first time:

1. Open the door (5) and remove the boiling chamber (1) by pulling on the handle.
2. Remove the lid (4) by turning the black lid knob counterclockwise and moving the lid (4) side to side and lift out.
3. Fill the boiling chamber (1) with cold or room temperature tap water until the water touches the bottom of the water level indicator (2). DO NOT overfill.
4. Replace the lid (4) on the boiling chamber (1). Turn the black lid knob clockwise and tighten firmly, ensuring a good seal.
5. Push the boiling chamber (1) into the left side of the distiller until it fits snug and clears the blue decal.
6. Close the door.
7. Remove lid of the drinking water container (10), and put in place.

Note: DO NOT install the post filter at this time. Keep the first batch of distilled water for soaking the post filter.

First Time Start-Up Continued...

8. Plug the power cord into the back of the machine and then into the electrical source.
9. Turn the power switch (11) to the ON position.
10. Press and release the "Start Cycle" Switch.
11. Allow the unit to operate until it automatically shuts off (approximately 3.5 hours).
12. Keep the first batch of distilled water for soaking the post filter, but do not drink.
13. Submerge the filter (8) completely in a separate small container with distilled water for one minute, flip the filter several times.. Remove the filter (8) and place inside the filter housing (9).
14. Slide the filter housing (9) into the guide above the drinking water container.
15. Replace the empty drinking water container (10) to the distiller.

NORMAL OPERATION

1. Ensure that the boiling chamber is cool.
2. Open the door (5) and remove the boiling chamber (1) by pulling on the handle.
3. Loosen the black knob on the lid (4) and slide the lid from side to side and lift the lid out.
4. Swirl and empty out any water left in the boiling chamber (1) from the prior batch.
5. Fill the boiling chamber (1) with tap water until it touches the bottom of the water level indicator (2).
6. Place the lid (4) on the boiling chamber (1). Tighten the black lid knob firmly, ensuring a good seal. DO NOT overtighten.
7. Push the boiling chamber (1) into the left side of the distiller until it fits snug and clears the blue decal. Close the door.
8. Be sure lid is removed from container. Put the drinking water container (10) in place.
9. Turn the power switch (11) to the ON position.
10. Press and release the "Start Cycle" Switch.
11. Allow the unit to operate until it automatically shuts off. This will take approximately 3.5 hours and will produce approximately 3 liters of distilled water.

CAUTION: Never open the door during operation and never remove the boiling chamber while the unit is operating.

MAINTENANCE & CLEANING

With proper care on your part, your Mini Classic CT will provide you with high-quality water for many trouble-free years. The following recommendations are for typical water conditions.

Note: If you live in a 'hard water area', you may need to increase the frequency of our care. *If you live in a 'soft water area', or you have a water softener, your unit may require less maintenance.*

Maintenance*

Every Batch:

- Before each batch, swirl the residual water from the previous cycle, and rinse out the boiling chamber (1).

Weekly:

- Clean your hands and rinse your filter in distilled water. Agitate the carbon filter so that it doesn't clump.

Monthly, or every 30 gallons:

- Clean the inside of the boiling chamber (1) to remove any buildup of solid residues. (See Cleaning below).
- Check screws on the controller, and tighten if needed.

Every 3 months:

- Replace the carbon filter, stock #45518. (See page 11).
- The O-ring for the steam tube & boiling tank should be checked. If cracked, replace. Otherwise, lubricate with a food-grade lubricant.
- Clean the exterior with Stainless Steel Cleaner & Polish, stock #6606.

**Lack of cleaning & maintenance may void warranty*

Cleaning

Cleaning the Exterior:

Use Stainless Steel Cleaner & Polish (stock #6606) and follow instructions on the product label.

Cleaning the Boiling Chamber:

Sometimes scale will build up inside the boiling chamber. This needs to be removed periodically to ensure good heating element life, and high-quality drinking water.

To Clean the Boiling Chamber:

1. Turn the power switch to the OFF position.
2. If the unit has been operating, allow it to cool for 30-60 minutes from the end of the distillation cycle before cleaning. *CAUTION: The Boiling tank could be hot and cause a burn if the unit has not been allowed to cool.*
3. Carefully remove the boiling tank from the unit.
4. Remove the boiling tank lid.
5. Drain any residual water inside the boiling tank.
6. Fill the boiling tank to the water level indicator with room temp water, and add 2 tbsps of Lumen™ Cleaner (stock #6603) OR Fill up the boiling tank to the water level indicator with a 50/50 solution of white distilled vinegar and hot water. Follow instructions on the label.
7. Allow solution to sit for up to 8 hours. Then drain and rinse thoroughly. Application may need to be repeated if scale remains.

DO NOT replace the boiling chamber back into the unit during the cleaning process


DO NOT allow the unit to operate with the Lumen Cleaner in the boiling chamber.

Replacing the Carbon Filter

This carbon filter (8) has been designed specifically for the Pure Water Mini Classic CT, and is used to polish the taste. The carbon filter should be replaced approximately every 3 months, or if the water develops a taste.

To Replace the Carbon Filter:

1. Remove the drinking water container (10) from the unit.
2. Remove the old filter by sliding the filter housing (9) and filter (8) towards you or by removing it from the opening in the drinking water container.
3. Immerse the new carbon filter (8) in a separate container filled with distilled water for one minute.
4. Remove the soaked filter, massage with fingers, and place it into the filter housing.
5. Slide the new filter and housing back into the guide.

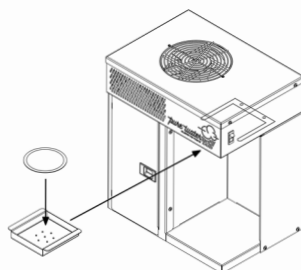

TROUBLESHOOTING

The Pure Water Mini Classic CT distiller is designed for years of dependable service. The following guide is presented to assist you in the event of any problems with your product.

SYMPTOM: **Unit does not produce water...**

<u>Possible Cause</u>	<u>Check...</u>
NO POWER	...that the power cord is plugged in and is pushed in completely to back of the machine. ...that the power to your home/office is on. ...that the on/off switch (11) is turned on. Then press the "Start Cycle" switch. ...that there is water in the boiling chamber. ...that the boiling chamber (1) is completely pushed in.

<u>Possible Cause</u>	<u>Check...</u>
HEATING ELEMENT BURNED OUT	...that there is power to your home/office... ...that the power cord is plugged in and is pushed in completely to back of machine. ...that the power switch is turned on... ...that there is no corrosion on or around the screw on the controller... ...that the boiling chamber is pushed in completely, and the is working properly <i>Then...</i> Perform the 'Boiling Tank Test' (Scan the QR code)



SYMPTOM: **The distilled water has an off-taste...**

<u>Possible Cause</u>	<u>Action...</u>
NEW CARBON FILTER OR CLEANING NEEDED	...change post filter by following directions for Replacing the Carbon Filter on pg 11. ...thoroughly clean the boiling chamber. <i>Note: Make sure the boiling chamber is cool.</i>

SYMPTOM: There is steam around the unit...

<u>Possible Cause</u>	<u>Check...</u>
INSUFFICIENT VENTILATION OF THE UNIT	...that the unit is not pushed hard against the wall. Keep a minimum of 3 inch clearance. ...if there are any items on the unit that may block the air flow. Remove any such items.

<u>Possible Cause</u>	<u>Check...</u>
FAN MOTOR	...if the fan is not turning and you have checked that there is power to the unit, and the timer switch is on, then it may be a failed fan motor. Replace the fan motor (Check parts list on pg 14).

<u>Possible Cause</u>	<u>Check...</u>
O-RING MISSING OR TORN	...use a flashlight to inspect the inside of the steam hole, located on the back of the boiling tank in the upper-right corner. ...If you do not see a black O-ring, or if the O-ring appears worn, damaged, or torn, please replace it immediately. ...An O-ring must be present in the steam hole at all times to help prevent corrosion and avoid metal scraping or damage to the steam tube and/or steam hole.


SYMPTOM: There is water around the unit...

<u>Possible Cause</u>	<u>Check...</u>
IMPROPER POSITIONING	...that the boiling tank lid is creating a seal when tightened ...that the carbon filter is in proper position and water is not compacted. If so, agitate the carbon. ...that the drinking water container is correctly placed to catch the water. ...that the heating element and gasket are tight. ...that the O-ring is in place and lubricated.

INDIVIDUAL PARTS LIST

Key #	Part #			Description
	120V	220V	240V	
1				Lid Knob w/ Stud
2				Lid O-Ring
3				Lid Disc S.S.
4	69	69	69	Gasket, Boiling Tank Lid
5				Washer, Gasket Retainer
6				Spring, Tank Lid
7				Crossbar, w/ Nut
8				Nut, 1/4-20 Nylock
(1-8)	406	406	406	Lid Assembly Kit
9	9202A	9202AV	9202AV	Heating Element, 750W-Otter Style
10	9205A	9205A	9205A	Seal, Silicon with Screws
11	9203A	9203A	9203A	Controller, Element-Otter Style
(9-11)	716B	716EV	716BV	Heating Element Kit-Otter Style
(10-11)	718B	718B	718B	Heating Element/Controller Kit-Otter Style
12				Boiling Tank, Studded
13	9108	9108	9108	Handle, Black Plastic
14	9009	9009	9009	Washer, 1/4", Stainless Steel
15	9044	9044	9044	Nut, Acorn, 1/4-20
(9-15)	709B	709EV	709BV	Boiling Tank Replacement
16	745	745	745	1 Gallon Jar w/Pour Lid
17	7276	N/A	NA	Power Cord, IEC
18	713A	713A	713A	Door Assembly, Rectangle Latch
19	9148	9148	9148	Riser, Pop-In
20	7246	7246	7246	Wire Tie, Clear/White
21	9217	9217	9217	Condensing Coil
(20-21)	712	712	712	Condensing Coil Kit
22	7275	7275	7275	IEC Connector
23	45014D	45014D	45014D	Top Cover
24	45504D	45014D	45504D	Boiling Tank Liner, Welded
25	9204A	9204A	9204A	Element Adapter
26	45024-02	45024-02	45024-02	Clip, Adapter
27	9218	9218	9218	Appliance Feet
28	45503C	45503C	45503C	Base, Studded
29	45008D	45008D	45008D	Cladding
30	45009B	45009B		45009B Middle Divider
31	9921	9912	9921	Hose Clamp, Wire
32	9541	9541	9541	Silicone Tubing
33	715	715	715	Timer, 210 Minute
34	642	642	642	On/Off Switch
35	643	643	643	Start Switch
36	744	744	744	Filter Cup Kit
37	45518	45518	45518	Carbon Filter, 4-Pack
38	45013A	45013A	45013A	Filter Holder, Square
39	A5506E-02	A55013A-02	45506E-02	Top Cabinet, Studded
40	9220	9220	9220	1" Bushing, Closed
41	9146	9146	9146	Terminal Block, 4-2-3
42	45016	45016	45016	Insulation (not shown)
43	9070	9070	9070	Nut, #10-24, Nylock
44	9003	9003	9003	Nut, #8-32, Nylock
45	9029	9029	9029	Screw, #10 Sheet Metal
46	9019	9019	9019	Screw, Fan
47	9342	9342	9342	Guard, Fan
48	667B	667BV	667BV	Fan, Box

Exploded View of Mini Classic CT

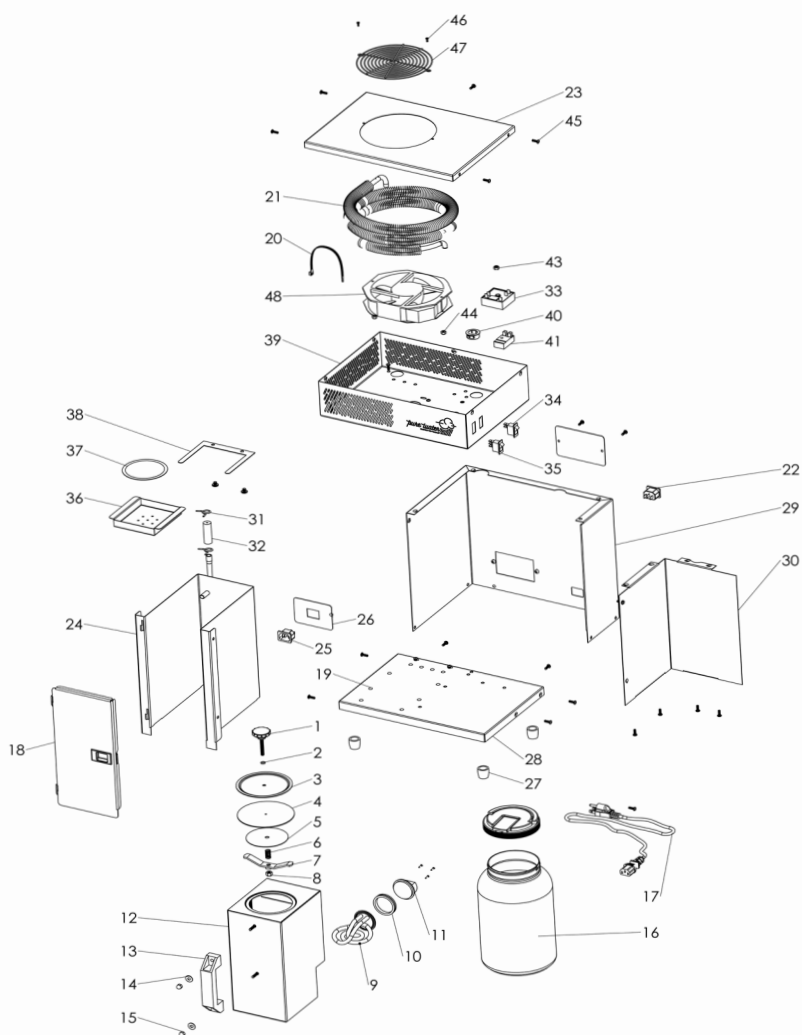

FOR THE RECORD

The model and serial number are found on the back panel. You should record both the model and serial number from the back of the machine for future reference.

Model MINI CLASSIC CT

Date of Purchase _____

Serial Number _____

Distributor Name, Phone, and Email: _____

ORDERING PARTS & SERVICING

Pure & Secure recommends that you have your Pure Water Mini Classic CT serviced by an authorized service center. Contact Pure & Secure for details.

To help you identify parts for your Pure Water Mini Classic CT, please see the parts list on page 14.

If you require parts or accessories at any time, please contact your Pure Water Distributor. In the event your Pure Water Distributor cannot help, you may contact Pure Water Customer Service at 402-467-9300 or Support@mypurewater.com.

Beware of Imitation Parts and Accessories: Knockoff parts and accessories are copies of OEM components that purport to be compatible or can be substituted for an OEM part – often called “will fit” parts. They are often made with inferior materials that do not meet our standards, and these may jeopardize the purity of your water.